


#### Features

- · Ergonomic wearable vibrator
- Designed for simultaneous G-spot, clitoris and anus stimulation
- 10 thumping modes
- 10 powerful vibration functions
- · Remote control for easy operation
- IPX7 Waterproof

切換模式:

短按"●"按鍵迴圈10種震動和拍打模式。

Rechargeable, USB charging cable included

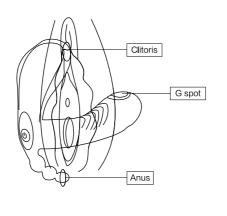

#### Operation

#### 1. Charging

Please fully charge MyThumper for around 2 hours before the first use. LED flashes: charging LED lights on: fully charged

#### 2. How to use

• Turn on / off:

To turn the unit on, please press and hold the "O" button for 1.5 seconds, until it will shortly vibrate for 0.1s. The unit is now in stand-by condition (the LED lights white). To switch off, please repeat the same operation.

Change the vibration and thumping pattern:

Please shortly push the "" button to cycle through the different vibration and thumping modes.

· Remote control operation

When the unit is in stand-by mode, shortly press the button § on the remote control to cycle through the vibration modes. Press and hold the button (1) for 1.5 seconds to stop the vibration motor.

Shortly press the button **(6)** on the remote control to cycle through the thumping pattern.

Press and hold the button @ for 1.5 seconds to stop the thumping motor.

#### . How to change the battery of the remote control

1. Open the battery cover as shown in the directions.

2. Take out the battery and insert the new battery (Type: CR2032).









3. Close the battery cover according to the above graphic.



## Specification

- Material: Silicone + ABS
- Unit size: 131 mm x 36 mm, insertable length: 114 mm
- Thumping modes: 10
- Vibration pattern: 10
- Charging time: 2 hours
- Operation time: 1 hour
- Waterproof: IPX7 (Remote control is not waterproof)

# 中文

# 特點

- 可穿戴式設計
- 同時可刺激陰蒂, G點和後庭

Care and Guarantee

vendor you bought the product from.

For the most pleasurable sensation, apply some water-based

lubricant to your body and to MyThumper before and during use.


Before and after use, please rinse it with water and then use toy

cleaner on the product, 30 seconds later, please wipe it clean and

keep it in the box. The product is guaranteed for 1 year from the

date of purchase. If you experience problems, please contact the

- 10種拍打模式
- 10 種強勁的震動力
- 遠端遙控操作
- IPX7 防水
- 可充電設計(內含USB資料線)

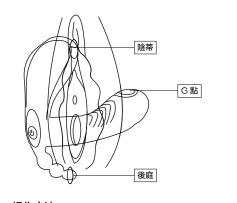

# 操作方法

# 1. 充電

第首次使用的時候請充電2個小時 LED 閃爍: 充電中 LED 長亮: 充滿

# 2. 如何使用

長按產品上按鍵 " ● " 1.5秒開機 ( 開機時馬達震動0.1秒 ) 。產品進入 待機狀態(馬達不工作),開關鍵位置的兩個白LED長亮; 再長按按鍵"●"1.5秒關機。

開機/關機:

# 遙控器操作: 當產品處於待機狀態下,短按遙控器上的"❸"按鍵切換震動模式 長按遙控器上的按鍵"❸"1.5秒停止運行震動馬達 短按遙控器上的" ◎ "按键切换拍打模式 長按遙控器上的" ◎ "按鍵1.5秒停止運行擊打的馬達 更換遙控器的電池: 1. 按照示意圖打開遙控器後蓋 2. 將舊電池取出,替換芯的 CR2032型號新電池 3. 按照示意圖關合上後蓋即可

#### 規格

材料: 矽膠+ ABS

● 產品尺寸: 131mm x 36mm, 插入尺寸: 114mm

拍打模式: 10 震動模式: 10 充電時間: 2 小時 運行時間: 1小時

防水: IPX7 ( 遙控器不防水 )

# 護理和質保

為了獲得最愉悅的感覺,請在使用前和使用期間在您的身體和 MyThumper 上塗抹一些水基潤滑劑。

使用前後請用清水沖洗乾淨,然後將"玩具清潔劑"噴灑在產品上, 30秒後擦拭乾淨並保存在盒內。產品自購買之日起保修 1 年。如果 您遇到問題,請聯繫您購買產品的供應商。